

OMNI PEDAL Owner's Manual

MODEL #: H-OP01 and H-OP01

MODEL NAME: Omni HighPro and Omni LowPro

INCLUDED WITH PEDAL: 9volt DC Power Supply, Polarity Adapter, Allen Wrench, 9volt Battery (installed)

INPUTS & OUTPUTS: The Omni has 2 sets of parallel input and output jacks on either side. Only one INPUT can be used at a time, either the right side or left side. The output jacks and tune out can be used on either side regardless of what input you are using.

SWITCHING BETWEEN ACTIVE & PASSIVE MODES: The Active/Passive button is located in between the two output jacks on the right side of the pedal. Use the provided Allen Wrench to depress or release the button when switching between modes.

PASSIVE MODE: Depress the button (in) to set the pedal to Passive Mode.

ACTIVE MODE: Release the button (out) to set the pedal to Active Mode.



POWER SUPPLY: In Active Mode, the Omni requires a 9volt power source. A new, Duracell 9volt battery is already installed in the Omni Pedal in our factory. The Omni requires a CENTER POSITIVE power adapter, included with the pedal. 1-Spot power supplies (or similar) are Center Negative and WILL NOT WORK with the Omni without a reverse polarity adapter.

- To save power, unplug your input to turn the battery off
- Plugging in an adapter also turns the battery off
- Use our Polarity Adapter (included) with a Center Negative power adapter
- For signal distortion caused by power loss (from battery or adapter) during use, depress the Active/Passive button to bypass power and enter Passive Mode.
- Selecting Passive Mode turns off the battery

REPLACING THE BATTERY: Carefully remove the 6 screws and remove bottom plate to access the 9volt battery.

ADJUSTING THE PEDAL SWEEP: The Active/Passive button is located in between the two output jacks on the right side of the pedal. Use the provided Allen Wrench to depress or release the button when switching between modes.

REPLACEMENT PARTS: We offer replacement String Kits, Pedal Feet, and pedal Mounting Kits for pedal boards and pedal steel rigs. Find them at your local dealer or at our website at goodrichsoundcompany.com

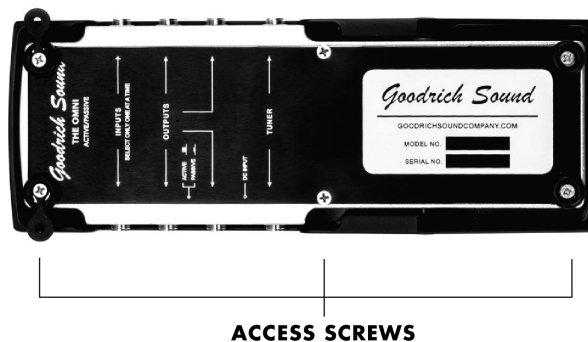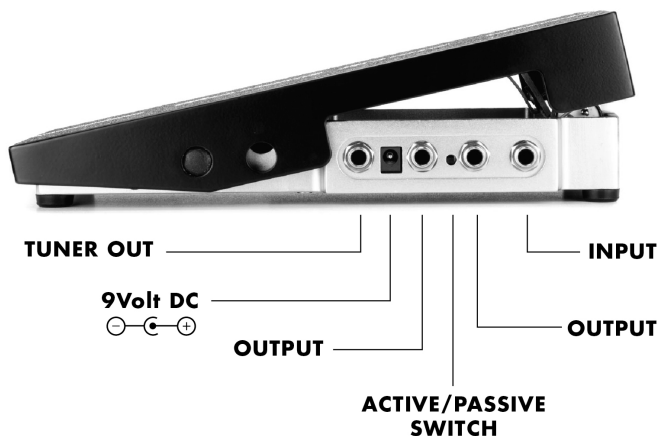

WARRENTY & REPAIRS: The Omni Pedal is guaranteed from manufacturer's defects for up to one year from date of purchase. Goodrich is not responsible for the customer's mishandling or misuse of our product. Repairs and warranties will be honored on a per customer

basis.

All repairs and maintenance are performed personally by our engineers. We believe in providing complete customer satisfaction. Let us know how we can help you with your Goodrich product.